




Installation

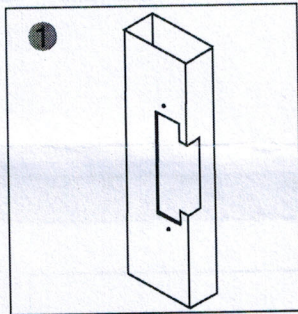


1
Cut hole according to the dimension of strike.

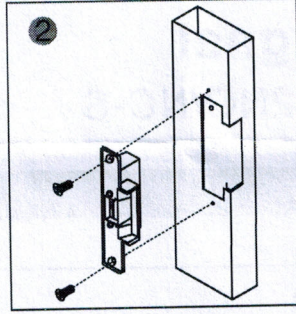

2
Assemble the lock and connect it to the power to test

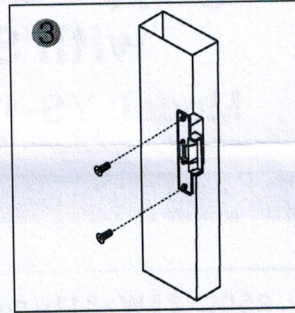


3
Fix the electric strike

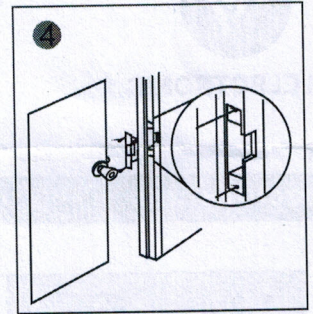


4
Finished

Suitable for

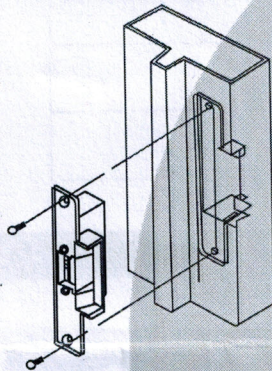


Metal Door Frame

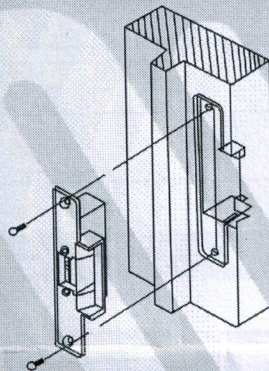


Wooden Door Frame

- | | | | | |
|--|--------|-------|---------------------------------------|-------------------|
| | Black | — + |] | |
| | Black | — - | | |
| | Yellow | — NC |] N.O. contact output : closed status | |
| | White | — COM | |] Common terminal |
| | Green | — NO | | |

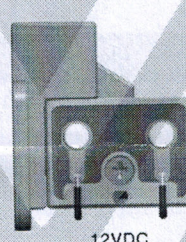

12VDC

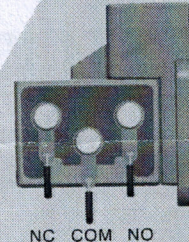

NC COM NO

Wire connection

